


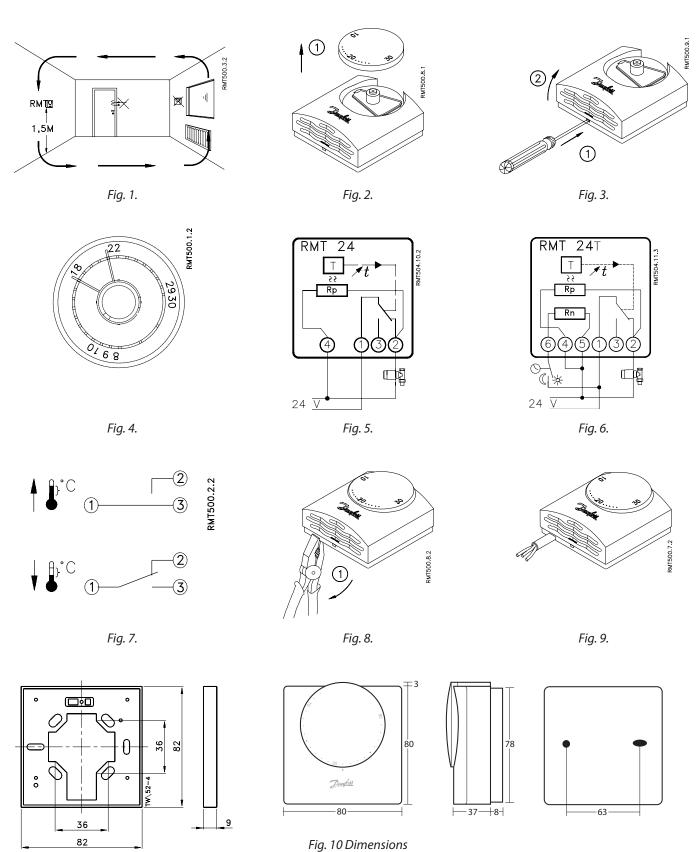

Installation Instructions

RMT-24 and RMT-24T





Installation Instructions

Location, fig. 1.

Do not site the room thermostat in a draught, in direct sunlight or close to appliances giving off heat (e.g. television set).

Fixing, fig. 2. and 3.

Make sure the supply voltage to the system is disconnected before commencing installation or subsequently removing the thermostat cover.

Fix the base moulding on a flat wall or on a flush box.

The temperature range can be limited by moving the two springs on the back of the setting knob, fig. 4.

Wiring, fig. 5 & 6.

Switch function, SPDT, fig. 7.

When the cable is to be wired through the side of the thermostat, break out the knockout with a pair of pliers (fig. 8 & 9).

When the room thermostat is connected to an inductive load, without noise suppression, there might be a risk of radio and TV interference.

RMT versions with parallel accelerator Rp, will have a lower temperature differential when terminal 10 is connected as shown in fig. 5 & 6.

RMT-24T only

RMT-24T will set-back the temperature by 5K, when the built-in resistance Rn is connected as shown in fig. 6.

Technical Details

Data	RMT24
Operating	Continuous use
Operating Voltage	24V
Output	24V
Setting Temperature Range	8-30°C
Switch Rating AC	10A (4)
Switch Type	SPDT
Operating Temperature Range	-10 - +50
Terminals	1 - 2.5 mm
IP Rating	20
Load Compensation Control	No
On/Off Control	Yes
ERP Class	1
Construction	EN/IEC 60730-1 + EN/IEC 60730-2-9
Control Pollution Situation	Degree 2
Rated Impulse Voltage	4 kV
Ball Pressure Test	75°C
Control Action	Type 1B
Minimum Contact Load	70ma
Dimensions (mm)	H83 x W80 x D45

Danfoss A/S

Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product meatalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit of function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.